

XEROX

'Click' to download complete Manual



ce Manual

45760

Phaser 4500/4510

Laser Printers

Warning

The following servicing instructions are for use by qualified service personnel only. To avoid personal injury, do not perform any servicing other than that contained in the operating instructions, unless you are qualified to do so.

Prepared By:

Xerox Corporation

XOG Worldwide Product Training and Information

26600 SW Parkway

Wilsonville, OR 97070

Copyright © 2007 Xerox Corporation. All Rights Reserved. Unpublished rights reserved under the copyright laws of the United States. Contents of this publication may not be reproduced in any form without permission of Xerox Corporation.

Copyright protection claimed includes all forms of matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted, including without limitation, material generated from the software programs which are displayed on the screen such as styles, templates, icons, screen displays, looks, etc.

Xerox technical training materials and service manuals are intended for use by authorized Xerox service technicians and service partners only and are not for resale. These materials may not be distributed, copied or otherwise reproduced without prior written consent from Xerox Corporation.

XEROX®, The Document Company®, the digital X®, CentreWare®, infoSMART®, Made For Each Other®, PagePack™, Phaser®, PhaserSMART®, and Walk-Up™ are trademarks of Xerox Corporation in the United States and/or other countries.

Acrobat®, Adobe® Reader®, Adobe Type Manager®, ATM™, Illustrator®, PageMaker®, Photoshop®, PostScript®, Adobe Brilliant® Screens, Adobe Garamond®, Adobe Jenson™, Birch®, Carta®, IntelliSelect®, Mythos®, Quake®, and Tekton® are trademarks of Adobe Systems Incorporated in the United States and/or other countries.

Apple®, AppleTalk®, Bonjour®, EtherTalk®, LaserWriter®, LocalTalk®, Macintosh®, Mac OS®, TrueType®, Apple Chancery®, Chicago®, Geneva®, Monaco®, New York®, and QuickDraw® are trademarks of Apple Computer, Inc. in the United States and/or other countries.

HP-GL®, HP-UX®, and PCL® are trademarks of Hewlett-Packard Corporation in the United States and/or other countries.

IBM® and AIX® are trademarks of International Business Machines Corporation in the United States and/or other countries.

Windows®, Vista™, Windows Server™, and Wingdings® are trademarks of Microsoft Corporation in the United States and/or other countries.

Novell®, NetWare®, NDPS®, NDS®, Novell Directory Services®, IPX™, and Novell Distributed Print Services™ are trademarks of Novell, Incorporated in the United States and/or other countries.

SunSM, Sun Microsystems™, and Solaris™ are trademarks of Sun Microsystems, Incorporated in the United States and/or other countries.

SWOP® is a trademark of SWOP, Inc.

UNIX® is a trademark in the United States and other countries, licensed exclusively through X/Open Company Limited.

As an ENERGY STAR® partner, Xerox Corporation has determined that this product, when equipped with a duplex unit, meets the ENERGY STAR guidelines for energy efficiency. The ENERGY STAR name and logo are registered U.S. marks.



PANTONE® Colors generated may not match PANTONE-identified standards. Consult current PANTONE Publications for accurate color.

PANTONE® and other Pantone, Inc. trademarks are the property of Pantone, Inc. © Pantone, Inc., 2000.

This product uses code for SHA-1 written by John Halleck, which is being used with his permission.

This product includes an implementation of LZW licensed under U.S. Patent 4,558,302.

Other marks are trademarks or registered trademarks of the companies with which they are associated.

Contents

Service Terms	xi
Product Terms	xii
Power Safety Precautions	xiii
Electrostatic Discharge (ESD) Precautions	xiv
Service Safety Summary	xv
Regulatory Specifications	xvii

1 General Information

Printer Introduction and Overview	1-2
Technical Support Information	1-2
Printer Configurations	1-3
Parts of the Printer	1-4
Control Panel	1-5
Image Processor Board (Phaser 4500)	1-7
Image Processor Board (Phaser 4510)	1-8
Consumables and Routine Maintenance Items	1-9
Supply Life Counters	1-10
Printer Specifications	1-11
Physical Dimensions and Clearances	1-11
Functional Specifications	1-12
Electrical Specifications	1-13
Environmental Specifications	1-13
Media and Tray Specifications	1-14
Memory Requirements	1-15

2 Theory of Operation

Overview of the Phaser 4500/4510 Laser Printer	2-2
Summary of the Printing Process	2-2
Paper Path of the Printer	2-4
Layout of Paper Transport Path	2-5
Sensors	2-7
Major Assemblies and Functions	2-11
Paper Tray	2-11
Paper Feeder	2-15
Control of Paper Size	2-17
Xerographics	2-18
Fuser	2-21
Fuser Control	2-23
Paper Exit Assembly	2-27
Drive	2-28
Electrical	2-29
Printer Options	2-33
Duplex Unit	2-33
Stacker	2-36
Optional 550-Sheet Feeder	2-39

3 Error Messages and Codes

Introduction	3-2
Servicing Instructions	3-2
Using the Troubleshooting Procedures	3-4
General Notes on Troubleshooting	3-4
Accessing Fault Histories	3-5
Entry Level Fault Isolation Procedure	3-6
Service Diagnostics	3-7
Service Diagnostics Menu Map	3-8
Service Diagnostic Control Panel Button Descriptions	3-9
Using Service Diagnostics	3-9
System Start-Up and POST	3-15
Power On Self Test (POST)	3-15
POST Faults	3-16
LED Blink Patterns	3-16
POST Diagnostic Test Descriptions	3-17
Operating System and Application Problems	3-19
Macintosh Printing Problems	3-19
Windows Printing Problems	3-19
Network Problems	3-20
Troubleshooting Procedures for Error Messages and Codes	3-21
Main Motor Failure	3-28
Laser Unit Failure	3-29
Fuser Failure	3-30
Fan Failure	3-31
Engine Logic Board NVRAM Failure	3-33
Jam At Tray <i>N</i>	3-34
Jam at Tray <i>N</i>	3-37
Jam At Top; Open Top Cover To Clear	3-40
Jam At Exit; Open Rear/Top Cover To Clear	3-43
Jam At Rear; Open Rear Cover To Clear	3-45
Jam At Stacker; Open Rear Stacker Cover To Clear	3-47
Jam At Rear; Open Duplex And Rear Cover To Clear	3-49
Jam At Duplex; Open Duplex To Clear	3-51
Duplex Unit Error	3-52
Stacker Error	3-53
Tray 3 Failure/Tray 3 or 4 Failure	3-54
Paper Size Jam	3-56
Close Top Cover/Close Rear Cover	3-58
Close Duplex Unit Cover	3-59
Close Stacker Cover	3-60
Install or Reseat Print Cartridge	3-61
Replace Print Cartridge	3-62
No Paper in Tray 1/No Paper in Tray 2	3-63
Tray 2 Paper Is Low	3-64
No Paper in Tray 3/No Paper in Tray 4	3-65
Tray 3 Paper Is Low/Tray 4 Paper Is Low	3-66
Insert Tray 1/Insert Tray 2	3-67
Insert Tray 3/Insert Tray 4	3-68
Stacker Is Full, Unload Paper	3-69
Standard Output Tray Is Full, Unload Paper	3-70
Replace Maintenance Kit	3-71
Inoperable Printer	3-72
No Recognition of Duplex Unit	3-73
No Recognition of Stacker	3-75

4 General Troubleshooting

Introduction	4-2
Control Panel Troubleshooting	4-3
LCD/LED Display Error/Inoperable Buttons	4-3
DC Power Supply Troubleshooting	4-4
LVPS (Low Voltage Power Supply)	4-4
DC-DC Converter (P4500 only)	4-5
AC Power Supply Troubleshooting	4-7
No AC Power	4-7
Print Engine Troubleshooting	4-11
Main Motor	4-11
Laser Unit Assembly	4-12
Fuser Assembly	4-15
Registration Sensor	4-17
No Paper Sensor	4-19
Low Paper Sensor	4-21
Toner Sensor	4-22
Output Tray Full Sensor	4-23
24 V Interlock	4-24
5 V Interlock, Interlock Switch Assembly	4-25
Rear Cover Switch	4-26
Interlock Switch Assembly (P4500 only)	4-26
Exit Motor PWBA	4-27
Exit Motor Assembly	4-28
Registration Clutch	4-29
Feed Clutches	4-30
Left Tray Guide	4-31
HVPS/Engine Logic Board	4-32
Image Processor Isolation	4-33
Image Processor Board	4-34
RAM DIMM Fault Isolation	4-35
Electrical Noise	4-37
Optional 550-Sheet Feeder PWBA (Tray 3)	4-39
Optional 550-Sheet Feeder PWBA (Tray 4)	4-40
Optional 550-Sheet Feeder No Paper Sensor	4-41
Optional 550-Sheet Feeder Low Paper Sensor	4-43
Optional Feeder Paper Size Switch Assembly	4-45
Optional 550-Sheet Feeder Feed Clutch Assembly	4-46
Optional 550-Sheet Feeder Turn Roller Clutch	4-48
Duplex Unit PWBA	4-49
Duplex Unit Motor	4-50
Duplex Unit Sensor	4-51
Duplex Unit Switch	4-53
Stacker PWBA	4-54
Stacker Motor Assembly	4-55
Offset Motor Assembly	4-56
Gate Solenoid Assembly	4-57
Stacker Rear Cover Switch	4-58
Stacker Sensor	4-59
Stacker Full Sensor (On Stacker PWBA)	4-60
Offset Sensor (On Stacker PWBA)	4-61

5 Print-Quality Troubleshooting

Print-Quality Problems Overview	5-2
Analyzing Test Prints	5-3
Deletions (Line, Band, Spots)	5-6
Fusing	5-7
Resolution	5-8
Registration (Side-to-Side)	5-9
Registration (Lead Edge-to-Tail Edge)	5-10
Skips/Smears	5-11
Spots	5-12
Skew	5-13
Other Print Defects	5-14
Print-Quality Troubleshooting	5-15
Light (Undertoned) Print	5-15
Blank Print (No print)	5-17
Black Prints	5-19
Vertical Deletions	5-20
Horizontal Deletions	5-22
Vertical Streaks	5-25
Horizontal Streaks	5-27
Spots	5-29
Unfused Image	5-31
Damaged Print	5-34
Resolution	5-35
Spot Deletions	5-36
Repeating Defects	5-38
Residual Image	5-39
Background	5-41
Uneven Density	5-42
Skewed Image	5-43
Registration	5-46
Skips and Smears	5-48

6 Adjustments and Calibrations

Service Test Prints	6-2
Test Prints	6-2
Engine Test Print	6-4
Adjustments	6-5
Adjusting Laser Power (Image Density)	6-5
Checking Registration (Margins)	6-5
Adjusting Simplex Registration (Margins)	6-7
Adjusting Duplex Registration (Margins)	6-8
Adjusting Fuser Temperature	6-8
Resetting Fuser Life	6-9
Resetting Printer Values to the Factory Default Values	6-10
Resetting Connection Setup Values	6-10
Resetting Paper Handling Setup Values	6-11
Resetting PostScript Setup Values	6-11
Resetting PCL Setup Values	6-11
Resetting General Setup Values	6-11
Resetting Control Panel Setup Values	6-12
Resetting Printer Controls Setup Values	6-12
Resetting File Security Setup Values	6-12
Resetting All Printer Default Settings (PostScript NVRAM)	6-13

7 Cleaning and Maintenance

Service Preventive Maintenance Procedure	7-2
Recommended Tools	7-2
Cleaning	7-2

8 FRU Disassembly

Overview	8-2
Standard Orientation of the Printer	8-2
General Notes on Disassembly	8-3
Preparation	8-3
Notations in the Disassembly Text	8-3
Print Engine: Covers	8-4
Paper Exit Cover	8-4
Paper Exit Rear Door	8-5
Rear Cover	8-6
Right Cover	8-7
Left Cover	8-8
Top Cover Assembly, Control Panel	8-9
Front Cover	8-11
Interlock Switch Assembly (P4500 only)	8-12
Print Engine: 150- or 550-Sheet Paper Cassette	8-13
Retard Roller and Holder	8-13
Print Engine: 150-Sheet Feeder	8-15
150-Sheet Feeder Assembly	8-15
Nudger Roller, Feed Roller	8-16
Nudger One-way Clutch	8-17
Nudger Gear	8-18
Feed Clutch, Registration Clutch	8-19
Registration Sensor	8-20
No Paper Sensor	8-21
Toner Sensor Assembly	8-23
Print Engine: 550-Sheet Paper Feeder	8-24
550-Sheet Feeder Assembly	8-24
Nudger Roller, Feed Roller	8-25
Nudger One-way Clutch	8-26
Nudger Gear	8-27
Feed Clutch	8-29
No Paper Sensor	8-30
Right Tray Guide	8-31
Left Tray Guide	8-33
Low Paper Sensor/Actuator	8-34
Print Engine: Xerographics	8-35
Vacuum Duct (P4510)	8-35
Front Duct, Sub Fan	8-36
Laser Unit Assembly	8-38
Laser Unit Shield Plate	8-39
Print Cartridge Left Guide	8-40
Fuser Harness Assembly	8-42
Link Lever, Gear 3 Link	8-43
Fuser Assembly	8-44
Transfer Roller Assembly	8-45
Transfer Chute	8-46
Print Cartridge Right Guide Assembly	8-47
Duplex Unit Opening Cover	8-48

Print Engine: Paper Exit	8-49
Paper Exit Assembly	8-49
Upper Exit Chute, Lower Exit Chute	8-50
Exit Motor Assembly	8-51
Output Tray Full Sensor	8-52
Stack Full Actuator	8-53
Print Engine: Frame and Drive	8-54
Motor Cover	8-54
Main Motor	8-55
Gear Assembly Housing	8-56
Gear Assembly Plate	8-58
Print Engine: Electrical	8-60
LVPS Shield Plate	8-60
Exit Motor PWBA	8-61
Low Voltage Power Supply (LVPS) (P4500)	8-62
DC-DC Converter (P4500)	8-63
Low Voltage Power Supply (LVPS) (P4510)	8-64
Power Switch, AC Power Harness Assembly	8-65
Rear Cover Switch	8-67
Main Fan (P4500)	8-68
Main Fan (P4510)	8-69
Image Processor Shield Assembly	8-70
I/P Shield Window	8-71
HVPS Shield Plate	8-72
HVPS/Engine Logic Board	8-73
Image Processor (I/P) Board	8-75
Options: 550-Sheet Paper Feeder	8-78
550-Sheet Paper Feeder Removal	8-78
Right Cover Plate	8-79
Left Cover Plate	8-81
Option Paper Size Switch Assembly	8-82
Optional Feeder Drive Assembly	8-83
550-Sheet Feeder PWBA	8-85
550-Sheet Feeder	8-86
Nudger Roller, Feed Roller	8-87
Nudger One-way Clutch	8-88
Nudger Gear	8-89
Feed Clutch Assembly	8-91
Turn Roller Clutch	8-92
Retard Roller	8-93
Options: Duplex Unit	8-95
Duplex Unit Removal	8-95
Left Cover	8-96
Right Cover	8-97
Top Cover	8-98
Upper Assembly Housing	8-99
Duplex Unit Lower Housing	8-100
Duplex Unit PWBA	8-102
Duplex Unit Fan (P4500)	8-104
Duplex Unit Fan (P4510)	8-105
Duplex Unit Sensor	8-106
Duplex Unit Roller	8-107
Duplex Unit Motor	8-109
Duplex Unit Switch	8-110

Options: Stacker	8-111
Stacker Removal	8-111
Stacker Rear Cover	8-112
Stacker Cover	8-113
Stacker Front Cover	8-115
Stacker Tray Assembly	8-116
Stack Full Actuator	8-117
Stacker PWBA	8-119
Offset Motor Assembly	8-120
Gate Solenoid Assembly	8-121
Stacker Sensor and Actuator	8-122
Stacker Rear Cover Interlock Switch	8-123
Lower Stacker Roller	8-124
Upper Stacker Roller	8-126
Stacker Motor Assembly	8-128

9 Parts Lists

Serial Number Format	9-2
Using the Parts List	9-3
Print Engine Parts	9-4
Parts List 1.1 Covers	9-4
Parts List 2.1 150-Sheet Paper Cassette	9-6
Parts List 4.1 550-Sheet Paper Cassette	9-9
Parts List 5.1 150-Sheet Paper Feeder	9-12
Parts List 7.1 550-Sheet Paper Feeder	9-15
Parts List 8.1 Xerographics	9-18
Parts List 10.1 Paper Exit (1/2)	9-21
Parts List 10.2 Paper Exit (2/2)	9-23
Parts List 11.1 Frame and Drive	9-25
Parts List 12.1 Electrical (P4500)	9-27
Parts List 12.1 Electrical (P4510)	9-28
Options	9-31
Parts List 20.1 550-Sheet Paper Feeder (1/2)	9-31
Parts List 20.2 550-Sheet Paper Feeder (2/2)	9-34
Parts List 20.3 Optional 550-Sheet Paper Cassette	9-36
Parts List 21.1 Duplex Unit (P4500)	9-39
Parts List 21.1 Duplex Unit (P4510)	9-40
Parts List 23.1 Stacker	9-43
Xerox Supplies and Accessories	9-46

10 Wiring Diagrams

Introduction	10-2
Print Engine Plug/Jack Locator	10-3
550-Sheet Feeder Plug/Jack Locator	10-12
Duplex Unit Plug/Jack Locator	10-14
Stacker Plug/Jack Locator	10-16
Notations Used in Wiring Diagrams	10-17

Print Engine Wiring Diagram	10-19
P4500: General Wiring Diagram	10-19
P4510: General Wiring Diagram	10-20
P4500: 24 V Interlock, Rear Cover Switch, Main Motor, Sub Fan, Exit Motor Assembly	10-21
P4510: 24 V Interlock, Rear Cover Switch, Main Motor, Sub Fan, Exit Motor Assembly	10-23
Fuser Assembly, Power Switch	10-25
Print Cartridge, Transfer Roller Assembly	10-26
150-Sheet Feeder, 550-Sheet Feeder, Main Fan	10-27
Laser Unit, 5 V Interlock, Interlock Switch Assembly	10-29
Paper Exit	10-30
Image Processor Board, DC-DC Converter (P4500), Control Panel	10-31
Optional 550-Sheet Feeder	10-32
550-Sheet Feeder General Wiring Diagram	10-32
550-Sheet Feeder Signal Diagram	10-33
Duplex Unit	10-34
Duplex Unit General Wiring Diagram	10-34
Duplex Unit Signal Diagram	10-35
Stacker	10-36
Stacker General Wiring Diagram	10-36
Stacker Signal Diagram	10-37

A Appendix

Phaser 4500 Menu Map	A-2
Phaser 4510 Menu Map	A-4
Service Code Table	A-6

Index